

JCB-SH70D

Original Instructions

Contents

Page Heading	Number
Introduction	3
General Warnings & Disposal	4
Safety Information	5-15
Understand Your Machine & Personal Safety	5
Inspect Your Machine	6
Work Area & During Use	7
Risk of Burns/Fire/Explosion	8
Electrical Safety	9
Carbon Monoxide	10
Fuel Safety	11
Fuelling/De-Fuelling & Storage	12
Batteries (Where Present)	13
Vibrations (Where Applicable) & Noise (Where Applicable)	14
General Safety	15
Component List	16
Dimension List	17
Unboxing Safety & Box Contents	18
Assembly	19
Operation	20-22
Fuelling/De-Fuelling	20
Operation Theory & Fuelling the Heater & Ventilation	21
Starting & Stopping & Restarting	22
Maintenance and Care	23-29
Storage & Maintenance Safety Notice & Draining Fuel Tank	23
Photocell	24
Ignition Electrode	25
Air Filter & Fan Blades	26
Fuel Nozzles	27
Fuel Filter	28
Fuel Pressure Adjustment & Wiring Diagram	29
Troubleshooting	30
Specifications	31
Warranty, Manual Updates, Returning Your Product, Leaving a Review & Ordering	32
Spare Parts	
Contact Us	33
Recycling & Disposal & Environmental Protection	34
Declaration of Conformity	35



Introduction

We work very hard to give all of our customers the best possible service. If you have any problems, before leaving negative feedback, please contact us to give us a chance to resolve the issue. We would be delighted if you left us positive feedback! Thank you for purchasing this product.

Important!



WARNING: READ THE INSTRUCTION BOOKLET THOROUGHLY BEFORE USING THE MACHINE.

Keep for future reference and pass it on if the machine is loaned or sold to another user.

This manual has been produced by Genpower Ltd, and should be kept with the product. Please read and understand these instructions before you use your product. Failure to do this may result in personal injury or damage to the product.

The safety precautions and warnings are to ensure your safety and protect you from harm or damage to the product.

The information contained in this manual was accurate at the time of production, however Genpower Ltd & JCB may make modifications to the product without notification.



GENERAL WARNINGS & DISPOSAL



To reduce the risk of injury, the user must read the instruction manual.



This symbol is used throughout this manual to warn the user about potential risks. Please read & understand these sections before using the device.



Personal Protective Equipment (P.P.E.), such as ear defenders, eye protection, safety gloves and a dust mask, must be worn during the operation of the device.



This product has been marked with a symbol relating to removing electric and electronic waste. The product should not be discarded with household waste but must be returned to a collection system which conforms to the European Directive 2012/19/EU. It will then be recycled or dismantled in order to reduce the impact on the environment. Electric and electronic equipment can be hazardous for the environment and for human health since they contain hazardous substances.



Hot Gas/Surface Warning : Never put your hand near or on the machines exhaust and gases. This WILL cause server burns and injury.



Diesel Fuelling Warning: ONLY fill this machines with diesel or suitable fuel. When fueling ensure the machine is OFF, away from an open flame or ignition source.

⚠ WARNING ⚠

ONLY TO BE USED IN WELL-VENTILATED AREAS

WARNING : This heater is thermostatically controlled and may start at any time. Please ensure this heater complies to your country's legislation. Read and follow all instructions on the heater and in the manual before assembling, operating or servicing this heater.

- Do not use with ductwork. Do not restrict inlet or outlet.
- Unvented direct fired heaters are intended for use only in open spaces with good ventilation.
- To be used only in well-ventilated commercial premises.
- Not for use where exposed to weather.
- Do not operate heater where flammable liquids or vapours may be present.
- Only use diesel or kerosene. Never use petrol, paint thinners, alcohol or other flammable fuels.
- **CAUTION:** Hot while in operation. Do not touch, keep children, clothing and combustibles away.
- Do not tamper with the unit. Go to a service centre to make any adjustments, etc.
- Do not place clothing or other combustibles on top of heater.
- Do not operate heater in close proximity to combustible surfaces or materials or in areas with high dust content.
- Operate on a stable level surface.
- Do not use with an external tank.

Safety Information

Understand Your Machine

- > **WARNING!** You must read these instructions carefully before operating the machine. Make sure that you are familiar with the controls and properly operate the machine. You must learn how to stop the machine quickly. If you do not follow the warnings and instructions, it may result in fire and/or serious injury. Make sure to save all warnings and instructions for future reference.
- > Read this manual and labels affixed to the machine to understand its limitations and potential hazards.
- > Be thoroughly familiar with the controls and their proper operation. Know how to stop the machine and disengage the controls quickly.
- > If the unit is to be used by someone other than original purchaser, or is to be loaned, rented, or sold, always provide this manual and any needed safety training before operation. The user can prevent and is responsible for accidents or injuries that may occur to themselves, to other people, or to property.
- > Do not force the machine beyond its limits. Use the correct machine for your application.
- > Know how to stop the machine quickly in case of emergency. Understand the use of all controls.
- > ALL MAINTENANCE other than that listed in this manual, should be carried out by professionally trained and certified personnel.

Personal Safety

- > **WARNING!** Never allow children or people unfamiliar with these instructions to use the product. Local regulations can restrict the minimum age of the operator.
- > Keep children, pets, and other people not using the unit away from the work area. Be alert and shut off the unit if anyone enters work area. Keep children under the watchful care of a responsible adult.
- > Stay alert, watch what you are doing and use common sense when operating the machine. Never operate the machine when unwell or tired, or if you have taken alcohol, medicine, drugs or any substances which may slow your reflexes and compromise judgment. A moment of inattention while operating the machine may result in serious personal injury.
- > Appropriate Personal Protective Equipment (PPE), **MUST** be worn at all times when operating or repairing the machine. Always wear anti-slip and resistant work footwear and long trousers while using the machine. Do not use the machine when barefoot, wearing sandals or similar lightweight footwear. Do not wear chains, bracelets or clothing that is loose fitting or hanging ties or cords. Tie long hair back. Always wear protective earplugs. Loose clothes, jewellery, or long hair can be caught in moving parts. Protect eyes, face, and head from objects that may be thrown from the unit. Always wear safety goggles or safety glasses with side shields when operating.
- > Always keep hands and feet away from all moving parts during operation. Moving parts can cut or crush body parts.
- > Always keep hands and feet away from all pinch points.
- > Do not touch parts that might be hot from operation. Allow parts to cool before attempting to maintain, adjust, or service.
- > Do not overreach. Keep proper footing and balance at all times. This enables better control of the machine in unexpected situations. Extending your body too far can result in a loss of balance and you may fall which will result in injury.



Safety Information

- > Never place any part of your body where it would be in danger if movement should occur during assembly, installation, and operation, maintenance, repairing or moving.
- > Start the machine carefully according to instructions and with feet away from the moving parts.
- > Do not place your hands or feet near or under rotating parts. Keep away from any discharge openings.
- > Keep in mind that the operator or user is responsible for accidents, hazards or unexpected events involving the machine that occur to other people or their property. It is the responsibility of the user to assess the potential risk of the area where work is being carried out. The operator or user must take all necessary precautions to ensure their own safety and that of others, especially on slopes or rough, slippery and unstable ground.

Inspect Your Machine

- > Check your machine before starting it. Keep guards in place and in working order. Make sure all nuts, bolts, etc., are securely tightened.
- > You must check the general condition of the machine before use.
- > Never operate the machine when it is in need of repair or is in poor mechanical condition. Replace damaged, missing, or failed parts before using it. Check for fuel leaks. Keep the machine in safe working condition.
- > Do not use the machine if the switch does not turn off the machine when running. Any machine that can't be controlled with the switch is dangerous and must be replaced.
- > Regularly check to see that keys and adjusting wrenches are removed from the machine area before starting it. A wrench or a key that is left attached to a rotating part of the machine may result in personal injury.
- > If the machine should start to vibrate abnormally, stop the engine and check immediately for the cause. Vibration is generally a warning sign of trouble.
- > Avoid accidental starting. Be sure the machine is off before transporting the machine or performing any maintenance or service on the unit. Transporting or performing maintenance or service on a machine with its switch on invites accidents.
- > Do not tamper with or disable safety systems.
- > Only use manufacturer-recommended attachments.
- > Before using, always visually inspect to see that the tools are not worn out or damaged. Replace worn out or damaged elements and bolts in set to preserve balance.
- > Keep all nuts, bolts and screws tight to ensure the equipment is in safe working condition.
- > Keep the machine in good operating condition. Operating the machine in poor or questionable condition could result in serious injury.
- > Be sure all safety devices are in working order and warning labels are in place. These items are installed for your safety.

Safety Information

Work Area

- > Make sure you thoroughly inspect the entire work area. Any liquid spilled on the floor may result in you slipping.
- > You must only work in daylight or with good artificial light in good visibility conditions. Keep people, children and animals away from the working area.
- > Operate on flat, level ground.
- > DO NOT work on wet ground. If there has been heavy rain on the working site, wait until the ground has dried up.
- > Never park the machine in a place with unstable ground which could give way.

- > You must be careful near ravines, ditches or embankments.
- > Do not work in the rain or when there is a thunderstorm or lightning risk. If there is bad weather conditions, do not use the machine.
- > **WARNING!** Risk on indoor air pollution!
- > Use this heater only in well ventilated areas. Provide at least a three square foot (2800sq cm) opening of outside air for every 29kW/hr or heater rating.

Minimum clearance from combustibles:

Top: 250cm

Side : 250cm

Front : 250cm

During Use

- > Walk, never run with the machine. Be very careful when pulling the machine toward you. You must look behind you to make sure there are no obstacles before and during operations in reverse gear (if applicable). Do not allow the machine to pull you along, you must walk and never run.

- > **WARNING!** If something breaks or an accident happens whilst working, you must turn off the machine immediately and move the machine away to prevent further damage. If an accident happens with injuries or third parties are injured, carry out the first aid measures most suitable for the situation immediately and contact the medical authorities for any necessary health care. Carefully remove any debris that might cause damage or harm persons or animals should it not be seen.

- > Do not carry passengers.

- > Always turn off the machine and ensure that all moving parts have come to a complete stop before making any repairs, adjustments, or inspections.



Safety Information

WARNING! Risk Of Burns / Fire / Explosion

- > NEVER use fuels such as gasoline, benzene paint thinners, or other oil compounds in this heater (RISK OF FIRE OR EXPLOSION).
- > NEVER refill the heater's fuel tank while heater is operating or still hot. This heater is EXTREMELY HOT while operating.
- > Keep all combustible materials away from this heater.
- > NEVER block air inlet or air outlet of the heater.
- > NEVER use duct work in front or at rear of heater.
- > NEVER move or handle heater while still hot.
- > NEVER transport heater in a vehicle with fuel in its tank.
- > If equipped with a thermostat, the heater may start at any time.
- > ALWAYS locate heater on a stable and level surface.
- > ALWAYS keep children and animals away from the heater.
- > Bulk fuel storage should be a minimum of 762cm from heaters, torches, portable generators or other sources of ignition. All fuel storage should be in accordance with federal, state, or local authorities have jurisdiction.
- > NEVER use this heater in living or sleeping areas.
- > NEVER use this heater where flammable vapours may be present.

Safety Information

Electrical Safety

WARNING! It is the responsibility of the owner to check this electrical product before use to ensure it is safe. You must inspect power cables, plugs, sockets, etc for signs of wear or damage. You must ensure this risk of electric shock is minimised by the installation of appropriate safety devices. A residual current circuit breaker (RCCB) should be incorporated in the main distribution board. We also recommend a residual current device is used (RCD). An RCD is particularly important for mobile devices that are connected to a supply without an RCCB. Any fault rectification or electrical work including the connection of a plug must be carried out by a qualified electrician.

You must also comply with electrical safety requirements including the Electricity at Work Act 1989 which requires portable electrical appliances used on business premises be PAT tested annually. The Health & Safety at Work Act 1974 places responsibility for safe condition of electrical appliances upon owners. Power cables and plugs should always be regularly inspected for safety. If in doubt about electrical safety, you must consult a qualified electrician.

WARNING! Risk of electric shock!

- > Use only the electrical power (voltage and frequency) specified on the model plate of the heater. Use only a local correct plug, grounded outlet and extension cord.
- > ALWAYS install the heater so that it is not directly exposed to water spray, rain, dripping water, or wind.
- > ALWAYS unplug the heater when not in use.

DANGER!
ELECTRICITY CAN KILL - NEVER WORK ON LIVE/ENERGISED EQUIPMENT.

- > Prior to carrying out any maintenance work you MUST identify electrical isolation methods and isolate all electrical supplies.
- > Prior to use and with all electrical supplies isolated, you MUST check all electrical cables, plugs and connectors for the following:
 - > Are intact and have no signs of damage, to include but not limited to bare wires, chaffing, cuts and loose wiring.
 - > If there are any signs of damage, the damaged item MUST be taken out of service until the damage has been repaired by an electrically competent person.
 - > All trailing cables should be routed so as not to cause any kind of trip hazard.
 - > NEVER work on or near electricity with wet hands, wet clothing and wet gloves.



Safety Information

DANGER

Carbon Monoxide is a poisonous gas and can kill in minutes. NEVER use inside a building or in an area with poor ventilation. NEVER use inside a confined space, such as but not limited to a house, garage, vehicle, boat or tent.

CARBON MONOXIDE IS A COLOURLESS, ODOURLESS GAS. INHALING THIS GAS CAN CAUSE DEATH OR SERIOUS LONG-TERM HEALTH PROBLEMS SUCH AS BRAIN DAMAGE.

Never operate in a confined space where dangerous carbon monoxide fumes can develop. All ignition operations have to be effected in an open or well-ventilated area. Always remember that exhaust fumes are toxic.

The symptoms of carbon monoxide poisoning can include but are not limited to the following; Headaches, dizziness, nausea, breathlessness, collapsing or loss of consciousness.

Carbon monoxide poisoning symptoms are similar to flu, food poisoning, viral infections and simply tiredness. It is quite common for people to mistake this very dangerous poisoning for something else.

To avoid carbon monoxide poisoning DO NOT use Petrol/Diesel powered equipment inside any of the following; Home, garage, tent, camper van, mobile home, caravan or boat. DO NOT use in an enclosed area or moving vehicle. This is not exhaustive and if you are in any doubt contact your dealer.

If you think you have or someone around you has been affected by carbon monoxide poisoning; Get them fresh air immediately, by leaving the affected area or by opening doors and windows. If safe and practical to do so make sure that the machine is turned off. DO NOT enter a room you suspect of having carbon monoxide present – instead call the emergency services.

Contact a Doctor immediately or go to Hospital – let them know that you suspect carbon monoxide poisoning.

Safety Information

Fuel Safety



CAUTION! ALL FUELS ARE HIGHLY FLAMMABLE AND PETROL VAPOUR IS EXPLOSIVE. TAKE EXTREME CARE WHEN HANDLING FUEL. KEEP FUEL OUT OF REACH OF CHILDREN.

General Safety

- > Do not smoke each time fuel is handled.
- > ALWAYS avoid inhaling fumes.
- > ALWAYS carry fuel in the correct and clearly marked container.
- > ALWAYS wear correct, suitable and fit for purpose Personal Protective Equipment (PPE), suggested items are but not limited to safety gloves and overalls.
- > To avoid sparking or arcing, keep grounded conductive objects such as tools away from exposed, live electrical parts and connections. These events could ignite fumes or vapors.
- > Do not operate the machine with known leaks in the fuel system.
- > Fire hazard - keep fuel away from all sources of ignition for example heaters, lamps, sparks from grinding or welding.
- > DO NOT carry out hot work on tanks that have contained fuel.
- > ALWAYS keep the work area tidy.
- > ALWAYS dispose of waste fuels correctly.
- > Serious personal injury can occur when petrol is spilled on yourself or your clothes. Rinse your skin and change your clothes immediately.

Spilled Fuel

- > If you have spilled fuel, make sure you do not attempt to ignite the engine but move the machine away from the area of spilled fuel and avoid creating any source of ignition until the fuel has evaporated and fuel vapours have dissipated.
- > When fuel is spilled on yourself or your clothes, wash your skin and change clothes immediately.
- > ALWAYS clean up spills promptly using absorbent granules and a lidded bin.



Safety Information

Fuelling / De-Fuelling

- > ALWAYS fuel and de-fuel in a well ventilated area outside of buildings. Use a funnel to add fuel, only outdoors. Do not smoke during this and each time fuel is handled.
- > Add fuel before igniting the engine, never remove the fuel tank cap or add fuel whilst the engine is running or when it is hot.
- > When de-fuelling ALWAYS use a proper fuel retriever.
- > Never overfill the fuel tank. Engine heat can cause fuel to expand, never fill the tank to more than 1/2" below the bottom of the filler neck. This will provide space for fuel expansion.
- > When refilling or draining the fuel tank, use an approved fuel storage container while in a clean, well-ventilated outdoor area. While adding fuel or operating the unit, do not smoke, and stay away from sparks, open flames, or other sources of ignition near the area of operation.
- > Always stop the engine and allow it to cool before filling the fuel tank. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot.
- > Loosen the fuel tank cap slowly to relieve any pressure in the tank.
- > ALWAYS keep the handles dry, clean and free of oil and fuel.
- > After fuelling, ensure to tighten the cap securely.
- > Never use the lock-function when filling with fuel.

Storage

- > Store fuel in containers specifically designed and approved for fuel storage.
- > Store fuel in a cool, well-ventilated area, safely away from sparks, open flames, or other sources of ignition.
- > Never store fuel or a machine with fuel in the tank inside a building where fumes may reach a spark, open flame, or any other source of ignition (such as a water heater, furnace, or clothes dryer). Allow the engine to cool before storing in any enclosure.
- > Replace all fuel tank and container caps securely and wipe up spilled fuel. Never operate the unit without the fuel cap securely in place.

Safety Information

Batteries (Where Present)

Batteries present a risk if they become damaged by the possible leaking of electrolyte. This electrolyte is an acid and can cause serious burn injuries. Care should be taken when working on or near them. **NOTE** the electrolyte may be in a liquid or gel form.

Should you come in to contact with electrolyte you should; Remove all clothing contaminated with electrolyte. If you cannot remove then saturate them in water.

Get medical assistance as soon as possible.

You must advise the medical staff of the type of acid.

Lead/acid battery = dilute sulphuric acid.

Nickel/cadmium = potassium hydroxide alkali electrolyte.

Use fresh running water to wash off excess electrolyte, continue this until medical assistance arrives. Make sure that you do not wash the electrolyte to another part of your body or face.

If electrolyte comes in to contact with Eyes the electrolyte needs to be immediately washed away with large amounts of water. Make sure that you do not wash the electrolyte to another part of your face or body.

Gasses from charging batteries are highly flammable and great care should be taken to charge in well ventilated areas.



There is an explosion risk if the battery terminals are short circuited, when connecting/disconnecting **ALWAYS** exercise great care so that the terminals or battery



Safety Information

Vibrations (Where Applicable)

- > Prolonged use of hand held (operated) machines will cause the user to feel the effects of/from vibrations. These vibrations can lead to white finger (Raynaud's phenomenon) or carpal tunnel syndrome. This condition reduces the ability of the hand to feel and regulate temperature, causing numbness and heat sensations and may cause nerve damage and circulatory tissue death.
- > Not all factors that lead to white finger disease are known, but cold weather, smoking and other diseases that affect blood vessels and blood circulation as well as large and long-lasting impact of shocks are considered factors in the formation of white finger. Note the following to reduce the risk of white finger and carpal tunnel syndrome;
- > Wear gloves and keep your hands warm.
- > Take regular breaks.
- > All of the above precautions may help reduce the risk of white finger disease but not rule out the carpal tunnel syndrome. Long-term and regular users are therefore recommended to observe the condition of your hands and fingers. Seek medical attention immediately if any of the above symptoms should occur.

Noise (Where Applicable)



- > The operating noise of the machine can damage your hearing. When wearing protection such as earplugs or ear defenders to protect your hearing. Long-term and regular users are advised to have hearing checked regularly. Be especially vigilant and cautious when wearing ear protection because your ability to hear alarm warnings will be reduced.
- > Noise emissions for this equipment is unavoidable. Carry out noisy work at approved times and for certain periods. Limit the working time to a minimum. For your personal protection and protection of people working nearby it is also advisable for them to wear hearing protection.
- > See Certificate of Conformity section for Outdoor Noise declaration of conformity.

Safety Information

General Safety

 **IMPORTANT!** Read and understand all of the directions in this manual before assembling, starting, or servicing the heater. Improper use of this heater can cause serious injury. Keep manual for future reference.

DANGER! NOT FOR USE IN NON-ADEQUATELY VENTILATED ENCLOSED AREAS

 **WARNING!** Fire, burn, inhalation and explosion hazard. Keep combustibles, such as building materials, paper or cardboard, a safe distance away from the heater as recommended by these instructions. Never use the heater in spaces which contain products such as gasoline, solvents, paint thinners, dust particles, volatile or airborne combustibles, or any unknown chemicals. This is an unvented portable heater. It uses air (oxygen) from the area in which it is used. Adequate combustion and ventilation air must be provided. Refer to VENTILATION.



 **WARNING!** Do not operate this heater until you have read, and thoroughly understand these safety and operating instructions. Failure to comply with the precautions and instructions provided with this heater can result in death, serious bodily injury, property loss or damage from the hazards of fire, soot production, explosion, burns, asphyxiation or carbon monoxide poisoning. Only persons who can read and understand these instructions should use or service this heater. Not for use in home or recreational vehicles.

This product is not suitable for use on wood floors or other combustible materials.

This is a Diesel (I-K Kerosene) directed-fire forced air heater. It is primarily intended for use for temporary heating of buildings under construction, alteration or repair. Directed-fired means that all of the combustion products of the heater enter the heated space. This appliance is rated at 98% combustion efficiency, but does produce small amounts of Carbon Monoxide. Carbon Monoxide is toxic.

For optimal performance of this heater, it is strongly suggested that I-K Kerosene is used, I-K Kerosene has been refined to virtually eliminate contaminants, such as sulphur. Which can cause a rotten egg odour during the operation of the heater. However, #1 or #2 fuel oil-diesel may also be used if I-K Kerosene is not available. Be advised that these fuels do not burn as clean as I-K Kerosene, and care should be taken to provide more fresh air ventilation to accommodate any added contaminants that may be added to the heated space. Use of #1 or #2 fuel oil may result in more periodic maintenance.


COMPONENT LIST

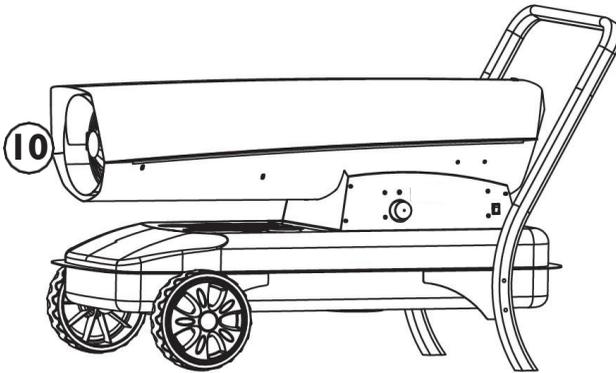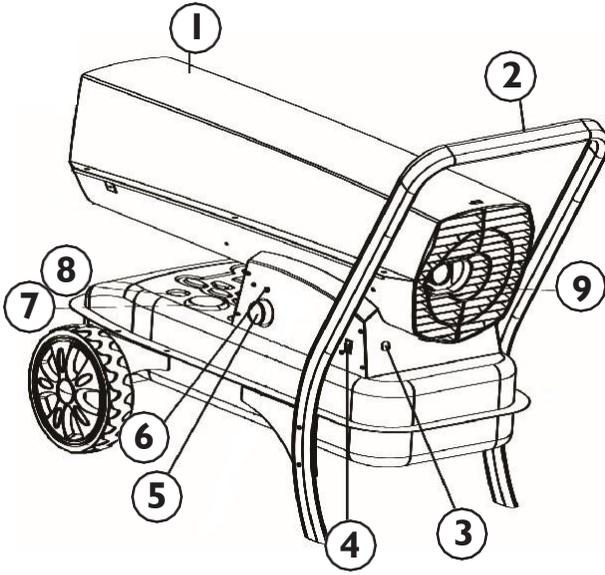

COMPONENT LIST

1. **Machine Shell** - The protective cowl that surrounds the burner
2. **Rear Handle** - Provides a sturdy means to move the machine
3. **Power Cord** - Here the power cord enters/exits the machine
4. **On/Off Switch**
5. **Thermostat Knob** - Alters the Temperature of the machine.
6. **Power LED** - This indicates whether the machine has a power supply
7. **Fuel Cap**
8. **Fuel Gauge**
9. **Fan Guard and Pressure Gauge** - A protective barrier to stop debris hitting the fan, and a Gauge showing the current Fuel Pressure
10. **Flame Cone** - An element that helps to disperse the outlet heat

Dimensions

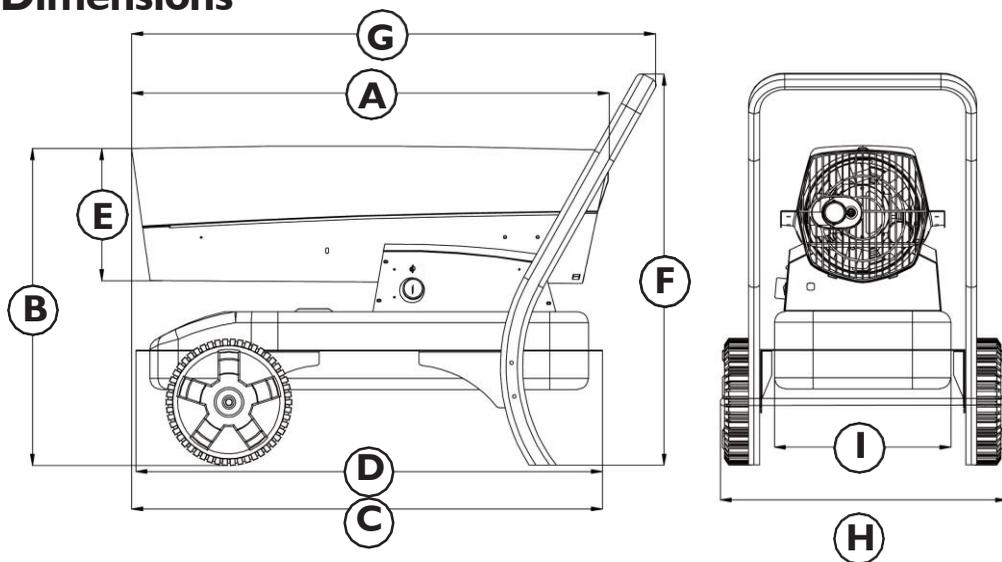

A. 738mm	F. 619mm
B. 506mm	G. 895mm
C. 776mm	H. 406mm
D. 763mm	I. 245mm
E. 200mm	

Unboxing Safety

⚠ WARNING! Unboxing and assembling the machine should be done on a flat, stable surface with enough room. Disposal of the packaging should be done in accordance with the local regulations in force.

⚠ WARNING! Some of the packaging material may be harmful to children. Keep out of reach of children.


Carefully remove the product from the packaging and examine it for any sign of damage caused during shipping. Lay the contents out and check them. If any part is damaged or missing, you must not use the machine. Contact Genpower Ltd Power immediately. You must keep the packaging material in case the machine needs to be returned or repaired.

Ensure that you have all the accessories and tools you need for assembly and operation including the suitable personal protective equipment.

Box Contents


When unboxing your machine, ensure the following parts are included:

- >Wheels & Wheel Cover
- >Axle (This is housed within the anti-vibration packaging)
- >2 x Cotter Pins
- >Washers
- >Front Wheel Mounts
- >Rear Mounts
- >8 x Nuts (A)
- >4 x Nuts (B)

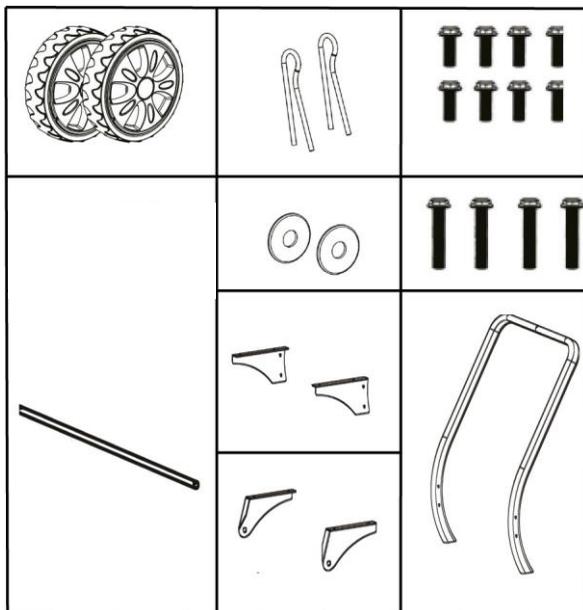

Assembly

Tools required: Medium cross head screw driver, 5/16" open end or adjustable wrench, needle nose pliers

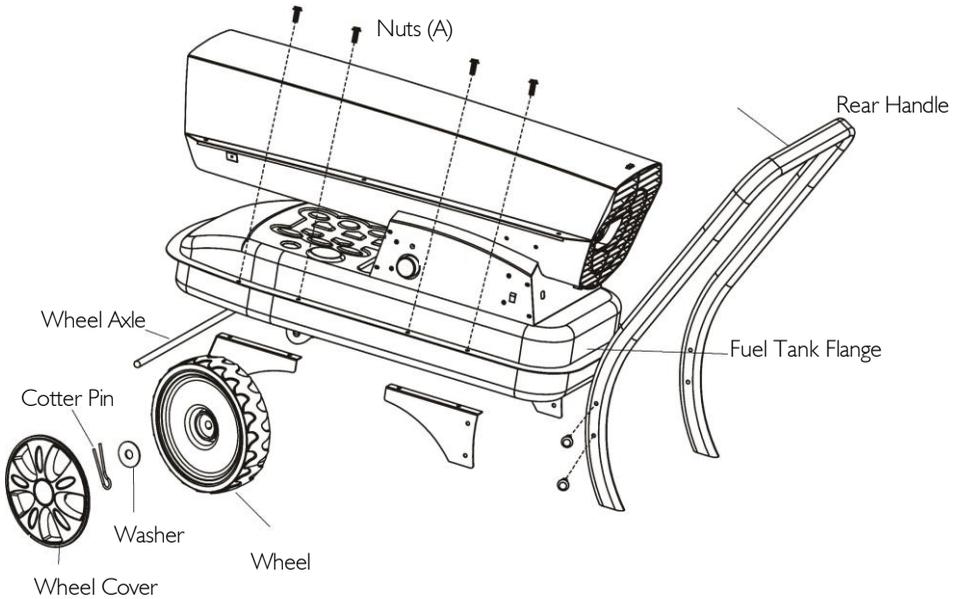

1. Align the holes of Front Wheel Mounts with the holes on the Fuel Tank Flange. Secure with the 4 x Nuts (A). Ensure the lower axle holes are facing toward the front of the machine
2. Repeat for the Rear Mounts, ensure the holes for the Rear Handle are facing the rear of the machine.
3. Repeat on both sides of the machine.
4. Secure the Rear Handle to the Rear Mounts using the Nuts (B)
5. Slide the Wheel Axle through the lower holes on the Front Wheel Mounts.
6. Place a wheel, followed by a washer. Secure this into place using the Cotter Pins. Simply insert the cotter pin through the hole in the axle, until holds into place.
7. Repeat on both sides and secure the Wheel Covers

Operation

Fuelling/Refuelling

For optimal performance of this heater, it is strongly suggested that I-K kerosene be used. I-K kerosene has been refined to virtually eliminate contaminants, such as sulphur. Which can cause a rotten egg odour during the operation of the heater. However, #1 or #2 fuel oil - Diesel may also be used if I-K kerosene is not available. Be advised that these fuels do not burn as clean as I-K kerosene, and care should be taken to provide more fresh air ventilation to accommodate any added contaminants that may be added to the heated space. Use diesel fuel can cause excess soot production.

DO NOT use any fuel that is not approved above.

NOTE: Diesel (I-K kerosene) should only be stored in a blue container that is clearly marked "Diesel (I-K kerosene)". Never store diesel (I-K kerosene) in a red container. Red is associated with gasoline.

- > **NEVER store diesel (I-K kerosene) in the living space. Diesel (I-K kerosene) should be stored in a well ventilated area outside the living area.**
- > **NEVER use fuel such as gasoline, benzene, alcohol, white gas, camp stove fuel, paint thinners, or other oil compounds in this heater (THESE ARE VOLATILE FUELS THAT CAN CAUSE A FIRE EXPLOSION).**
- > **NEVER store diesel (I-K kerosene) in direct sunlight or near a source of heat.**
- > **NEVER use Diesel (I-K kerosene) that has been stored from one season to the next. It deteriorates over time. OLD DIESEL (I-K kerosene) WILL NOT BURN PROPERLY IN THIS HEATER.**
- > **Use diesel in the heater/ I-K kerosene is a suitable substitute.**

Operation - Theory

Fuel System

This heater is equipped with an air pump that operates off of the electric motor. The pump forces air through the air line connected to the fuel tank, drawing fuel to the nozzle in the burner head. Air also passes through the nozzle where it mixes with the fuel and is sprayed into the combustion chamber in a fine mist.

Quick-Fire Ignition

A transformer sends high voltage to a two pronged spark plug. The spark ignites the fuel/air mixture as it is sprayed into the combustion chamber.

Air System

A fan is turned by the heavy duty motor, which forces air around and into the combustion chamber, where it is super-heated and forced out the front of the chamber.

Temperature Limit Control

This heater is equipped with a temperature limit control designed to turn the heater off should the internal temperature rise to an unsafe level, if this device activates and turns your heater off, it may require service. Once the temperature falls below the reset temperature, you will be able to start your heater.

Electrical System Protection

The heater's electrical system is protected by a circuit breaker that protects the system components from damage. If the heater fails, check the fuse first, and replace if necessary.

Flame Sensor

The heater uses a photocell to see the flame in the combustion chamber. Should the flame extinguish, the sensor will stop electrical current and the heater will shut off.

Fuelling The Heater

⚠ CAUTION! NEVER FILL FUEL TANK INDOORS. ALWAYS FILL FUEL TANK OUTDOORS. BE SURE THAT THE HEATER IS ON LEVEL GROUND WHEN FUELLING, AND NEVER OVERFILL FUEL TANK.

⚠ WARNING! NEVER REFUEL THIS HEATER WHILE IT IS HOT OR OPERATING, FIRE OR EXPLOSION COULD RESULT.

It is always a good idea to fire the heater outdoors for the first time. This will allow any oils used in the manufacturing process to be burned off in a safe environment. This initial burn should last at least 10 minutes.

Ventilation

Risk of indoor air pollution. Use heater only in well ventilated areas.


Always provide a fresh air opening in the heated space of at least three square feet (2800sq.cm) for each 29kW/hr of heater output. The following are some examples..

-A two-car garage door raised 15.24cm (6 inches)

-A single-car garage door raised 15.24cm (9 inches)

Operation - Starting

1. Remove fuel cap and fill the tank with fuel until the gauge reads "F".
2. Secure fuel cap back into place.
3. Plug power cord into a suitable power source, make sure the power sources switch is in the off position before inserting power cord.
4. Turn the Thermostat control knob to the desired temperature.
5. Press the Power Switch into the "On" position. The Power LED will now be activated.

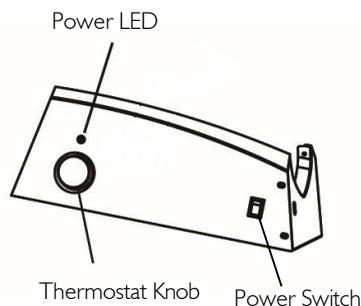

Operation - Stopping

1. Simply turn the power switch to "OFF" position and unplug
2. the power cord.

Operation - Restarting

1. Wait ten seconds after shutting off the heater.
2. Turn the power switch to "ON" position.
3. Be sure to follow all starting procedure precautions.

Maintenance and Care - Storage

- Store in a cool, dry, well-ventilated place away from sources of ignition and varying changes in temperature.
- Store on a flat and level surface.
- DO NOT stack other items on top of the machine when in storage
- Store the machine in a safe place, out of the reach of children or anyone who is not familiar with operation
- Be sure that the storage area is free of dust and corrosive vapours. Repack the heater in the original shipping material. Keep the users manual in an easily accessible place.


Maintenance Safety Notice

- When performing any form of machine maintenance, YOU MUST ensure the On/Off Switch is in the off position, Thermostat Knob is set to "0" and machine is unplugged from ANY power source. ALWAYS wear the correct PPE and follow processing in this manual to undertake ANY MAINTENANCE.

Draining Fuel Tank

- When storing the machine Long Term, draining the tank is required. Old out of date Kerosene and Diesel can damage your heater. Before draining tank, ensure a suitable container is located below the Drain Hole. Ensure correct PPE is worn when draining fuel (protective hand gloves and eye goggles)

- >To drain the fuel tank, simply remove the Drain Plug bolt and washer
- >Allow the fuel to flow out.
- >Once all the fuel has been removed, Re-
- >install the Washer and Drain Plug.




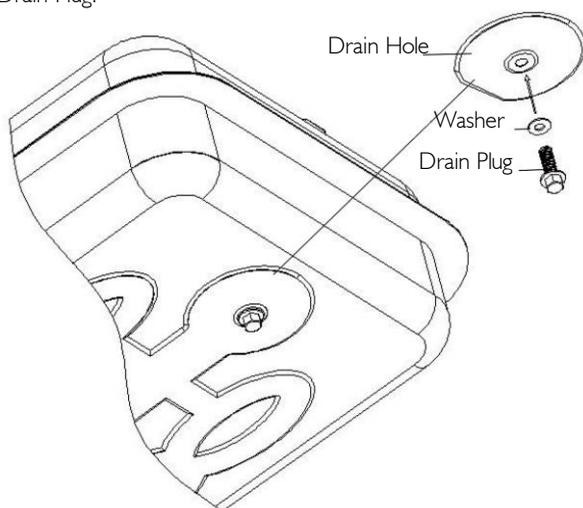


Maintenance and Care -Photocell

The Photo lens helps the machine detect when the burner in operating correctly.

- >The photocell should be cleaned at least once per heating season or more depending on condition.
- >Use a cotton swab dipped in water or alcohol to clean the lens of the photocell.


***NOTE:** the proper photocell position as noted in the diagrams.

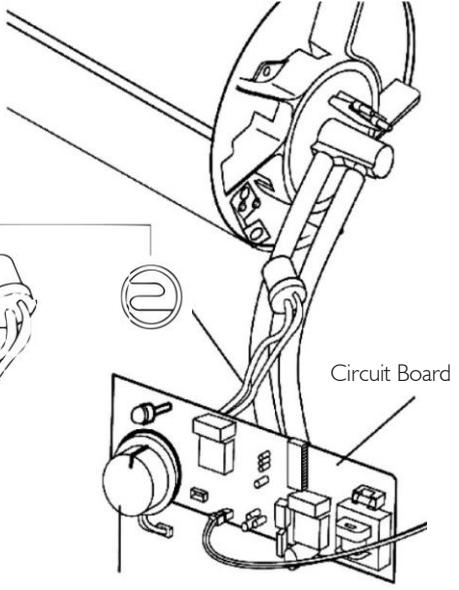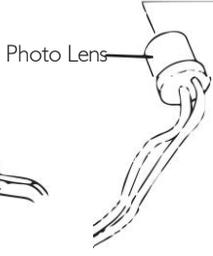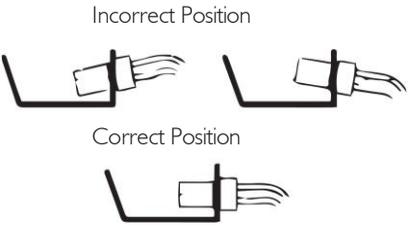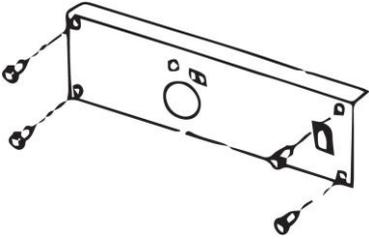

Maintenance and Care –Ignition Electrode

Clean and re-gap every 600 hours of operation, or replace as needed.

- >Remove Ignition Wires. These are Push/Pull fit
- >Remove the screw that secures the Ignition Electrode. Now Remove the Ignition Electrode
- >After removing the electrode, clean the terminals with a wire brush.
- >Re-gap the terminals to 0.14”(3.5mm) if required.

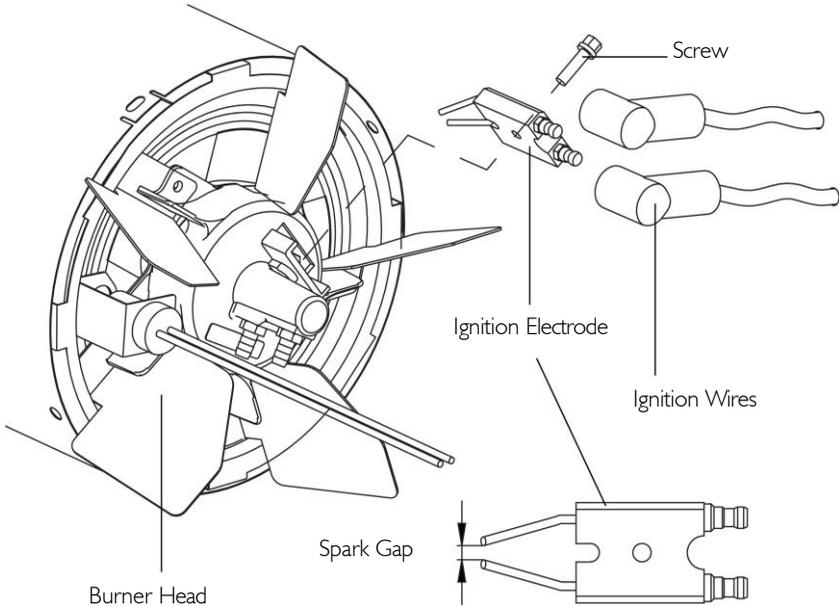


Maintenance and Care - Air Filter

The air filter should be replaced or washed with soap and water and dried thoroughly every 500 hours of operation, or less, depending on conditions.

The output and lint filter should be replaced every 500 hours of operation, or less, depending on conditions.


***NOTE:** Use of diesel (I-K kerosene) may require additional maintenance.

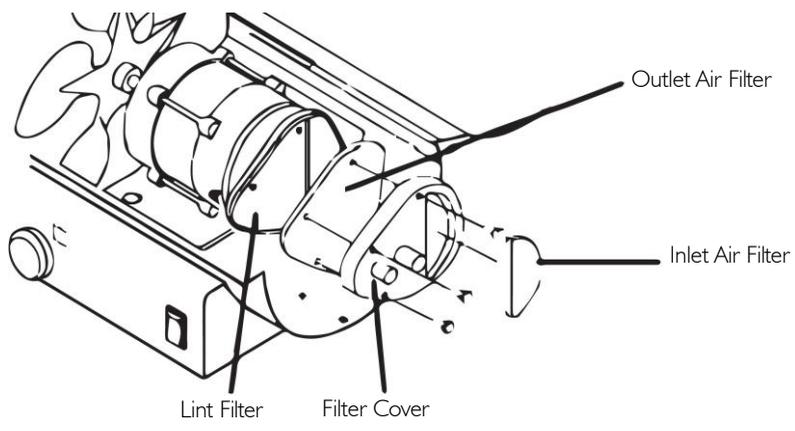

Maintenance and Care - Fan Blades

Blades should be cleaned at least once per heating season, depending on condition.


Remove all accumulated dust and dirt with a damp cloth, taking care not to bend any of the fan blades. Be sure fan blades are dry before re-starting the heater. For fan removal, see below.

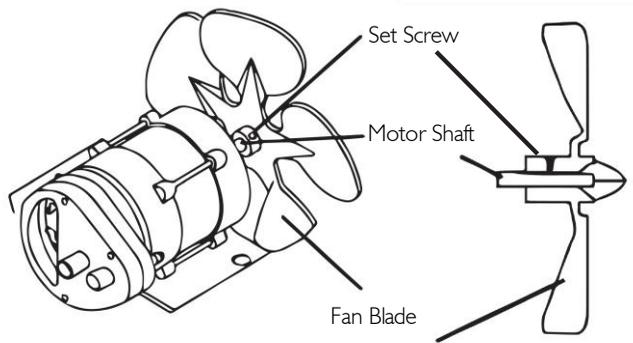

Maintenance and Care - Fuel Nozzles

Nozzles should be cleaned or replaced at least once per heating season. Contaminated fuel could make this necessary immediately.

To clean dirt from the nozzle, blow compressed air through nozzle front, it may be necessary to soak nozzle in clean diesel (I-K kerosene) to help loosen any particles.

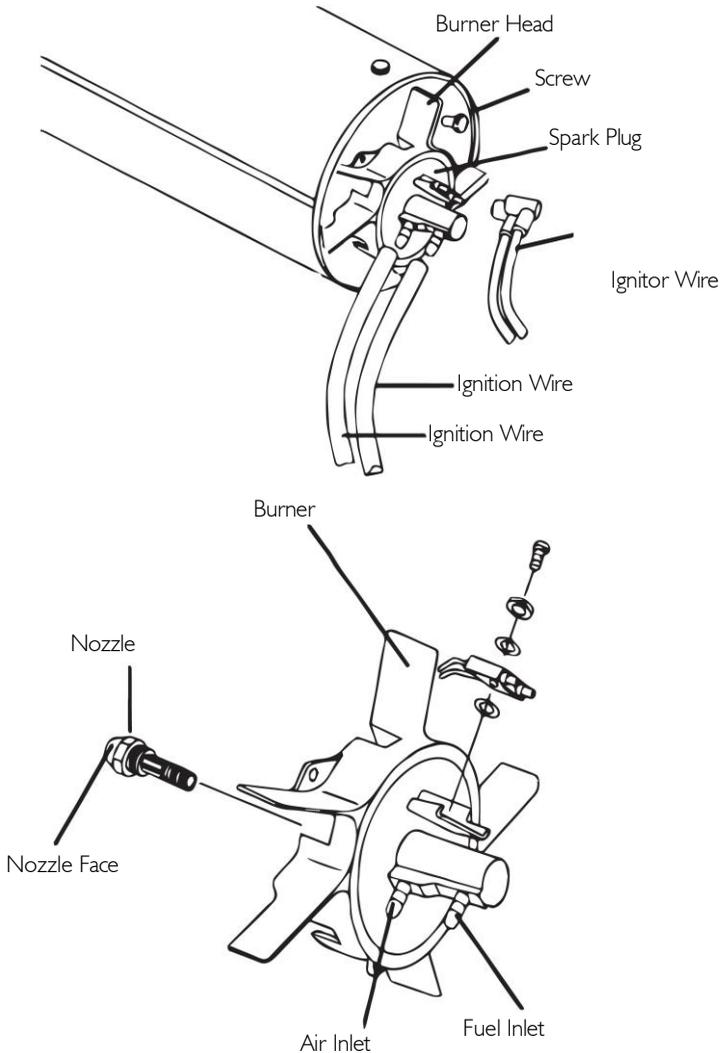


NOTE: Use of diesel (I-K kerosene) may require additional maintenance. Using this heater without proper maintenance or with contaminated or old fuel may lead to improper combustion and possible soot production. **SUITABLE FUELS ARE ESSENTIAL.**

Maintenance and Care -Fuel Pressure Adjustment


While heater is operating, using a flat blade screw driver turn relief valve Clockwise to increase the fuel pressure. Turn Counter-clockwise to decrease.

Correct pump pressure is 31 Kpa / 4.5Psi

For best measurement of pressure, test with full tank of fuel. Optimum pressure occurs when the nose cone is cherry red and there are no extending flames from the heater.

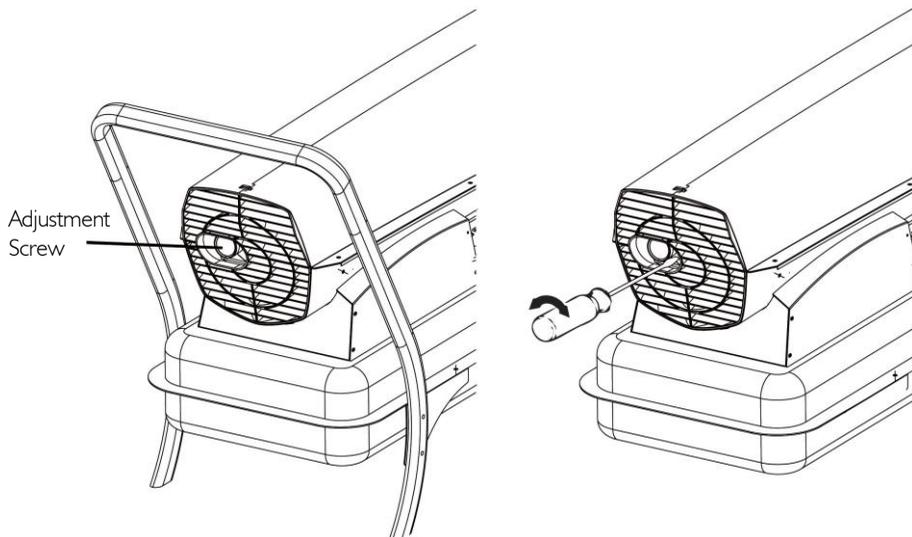

Wiring Diagram

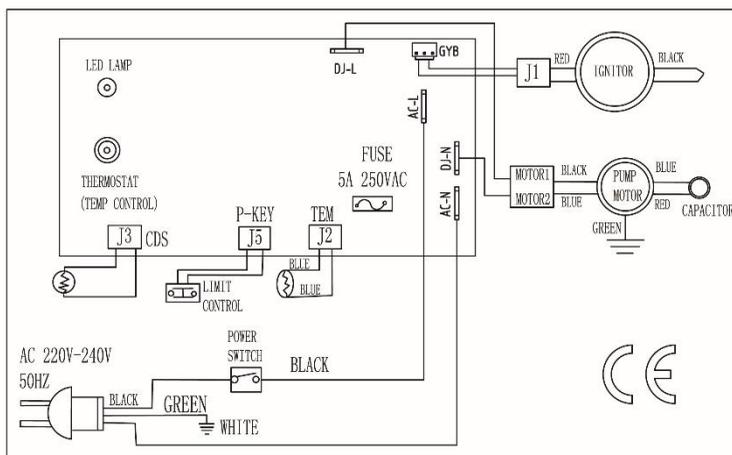

Troubleshooting

Problem	Possible Cause	Solution
Heater fires, but main PCB shuts heater off after a short period of time, flame is flickering, and LED display show "E1" (1 flash).	<ol style="list-style-type: none"> 1. Incorrect pump pressure. 2. Dirty input output or lint filter. 3. Dirty fuel filter. 4. Nozzle is dirty. 5. Photocell lens is dirty. 6. Photocell not installed properly. 7. Photocell defective. 8. Improper electrical connection between main PCB and photocell. 	<ol style="list-style-type: none"> 1. Adjust pump pressure. 2. Clean/replace air filter. 3. Clean/replace fuel filter. 4. Clean/replace nozzle. 5. Clean/replace photocell. 6. Adjust photocell position. 7. Replace photocell. 8. Check wiring connections.
Heater will not operate, or motor runs for short time, lamp flickers and LED display shows "E1" (1 flash).	<ol style="list-style-type: none"> 1. No diesel in fuel tank. 2. Incorrect pump pressure. 3. Corroded spark plug or incorrect plug gap. 4. Dirty fuel filter. 5. Dirty nozzle. 6. Moisture in fuel/fuel tank. 7. Improper electrical connection between transformer and circuit board. 8. Igniter wire not connected to spark plug. 9. Defective igniter. 	<ol style="list-style-type: none"> 1. Fill tank with fresh diesel. 2. Adjust pump pressure. 3. Clean/replace spark plug. 4. Clean/replace fuel filter. 5. Clean/replace nozzle. 6. Rinse out fuel tank with clean fresh diesel. 7. Inspect all electrical connection (see wiring diagrams). 8. Re-attach igniter wire to spark plug. 9. Replace igniter.
Fan does not operate when heater is plugged in and power switch is in the "ON" position. The lamp is flickering or on and LED display shows "E1" or "E2" (1 flash or 2 flashes).	<ol style="list-style-type: none"> 1. Thermostat is set too low. 2. Broken electrical connection between main PCB and motor. 	<ol style="list-style-type: none"> 1. Rotate thermostat to a higher setting. 2. Inspect all electrical connection (see wiring diagrams).
Lamp is flickering, and LED display shows "E3" (3 flashes).	<ol style="list-style-type: none"> 1. Thermostat switch has failed. 	<ol style="list-style-type: none"> 1. Replace thermostat switch, wiring diagrams.
Poor combustion and / or excess soot production.	<ol style="list-style-type: none"> 1. Dirty input output or lint filter. 2. Dirty fuel filter. 3. Poor quality of fuel. 4. Pump pressure is too high or too low. 	<ol style="list-style-type: none"> 1. Clean/replace air filter. 2. Clean/replace fuel filter. 3. Be sure fuel is not contaminated or old. 4. Use proper pressure.
Heater does not turn on and the lamp is not lit.	<ol style="list-style-type: none"> 1. Temperature limit sensor has overheated. 2. No electrical power. 3. Fuse blown. 4. Improper electrical connection between temperature limit sensor and circuit board. 	<ol style="list-style-type: none"> 1. Push power switch to "OFF" and allow heater to cool for 10 minutes. Push switch back to "ON". 2. Check power cord and extension cord to insure of proper connection, test power supply. 3. Check/replace fuse. 4. Inspect all electrical connection (see wiring diagram).

Specifications

Model	JCB-SH70D
Heat Output (kW)	20
Heat Output (BTU)	68,243
Fuel Consumption (L/hr)	1.9
Fuel Tank Capacity (L)	19
Fuel Type	Kerosene/Diesel
Heating Area (m ³)	400
Pump Pressure (Kpa)	31
Power Supply	230V 50Hz 5A
Phase Type	Single
Net Weight (kg)	16.5

Warranty

Proof of purchase will be required before you make a warranty claim. Full warranty terms and conditions can be found on the support website:

www.jcb-tools.co.uk

Manual Updates

Our manuals are constantly being reviewed and updated. Should you find an error, omission or something unclear, please contact us for assistance. We reserve the right to make any modifications without prior notice whenever necessary.

Our latest manuals are also placed online. All our manuals can be downloaded at:

www.hyundaipowerproducts.co.uk

Returning Your Product

If you are returning your product, please contact the dealer for their returns policy.

Leaving a Review

We work very hard to give all of our customers the best possible service. If you have any problems, before leaving negative feedback, please contact us to give us a chance to resolve the issue. We would be delighted if you left us positive feedback! To leave a review, please go to: uk.trustpilot.com

Ordering Spare Parts

You can find the spare part you are looking for at power-spare.co.uk



Contact Us

Need Help? Talk To Our Experts

Our friendly aftersales team will be more than happy to help you.

**Phone**

Call our team on 01646 687 880

**Email**

aftersales@genpower.co.uk

**Post**

Genpower Ltd, Isaac Way, Pembroke Dock, Pembrokeshire, SA72 4RW.

**Support Website**

Go to jcb-tools.co.uk



Recycling and Disposal

We do not offer a takeback scheme for the recovery of Waste Electrical Electronic Equipment (WEEE) & Batteries. Instead the responsibility to dispose of WEEE and/or Batteries is passed onto you by us. So when it becomes necessary to dispose of your machine you must take it to your local Civic Amenity Site. For further information please contact your local Authority for disposal advice.

You **MUST** make sure that all unused oil and fuel is disposed of correctly either beforehand or at your local Civic Amenity Site.

- > Under **NO** circumstances must any fuel or oil be put down any drains.
- > Certain products contain WEEE waste which should not be disposed of in your domestic waste.
- > You **MUST** recycle WEEE in accordance with your local authority or recycling centre.
- > Certain products contain batteries which should not be disposed of in your domestic waste.
- > You **MUST** recycle batteries in accordance with your local authority or recycling centre.
- > Unwanted packaging and materials should be stored and taken to a recycling centre so it can be disposed of in a manner which is compatible with the environment.

We are a Member of the VALPAK National Compliance Scheme and our registration number is RM08660. For further information about disposal please contact your Local Authority.

You can also get more advice and guidance about recycling at the following website <http://www.recycle-more.co.uk>

Should you pass this product on to another user either sold or loaned, you **MUST** pass on this user manual. This will make sure that all other users can use and maintain this machine safely.

Environmental Protection

- > Environmental protection should be a priority of considerable importance when using the machine, for the benefit of both social coexistence and the environment in which we live. Try not to cause any disturbance to the surrounding area.
- > You must comply with local regulations and provisions for the disposal of packaging, oils, fuel, filters, damaged parts or any elements which have a strong impact on the environment. This waste must not be disposed of as normal waste. It needs to be separated and taken to specified waste disposal centres where the material will be recycled.
- > You must comply with local regulations for the disposal of waste materials after mowing.
- > When disposing, do not pollute the environment with the machine, but hand it over to a disposal centre, in accordance with the local laws in force.

DECLARATION OF CONFORMITY

We,
Genpower

Declare that the product:

Description
20Kw Space Heater
Type
JCB-SH70D
Function
Space Heating

Complies to the Following Directives;

Low Voltage Directive

2014/35/EU

Energy Related Products (ERP)

2009/125/EC

Electromagnetic Compatibility Directive

2014/30/EU

RoHS 2.0 Directive

2011/65/EU

Standards Conform to

EN 13842:2004

The person authorized to compile this technical file:

Date: 01/12/2022

Signature



Name/ title: Roland.J.Llewelin / Managing Director

JCB Tools are a Licensee of J.C.Bamford Excavators Ltd, operated via Genpower Ltd.

Address: JCB Tools ,Isaac Way, Prembroke Dock, SA72 4RW